Remote Control

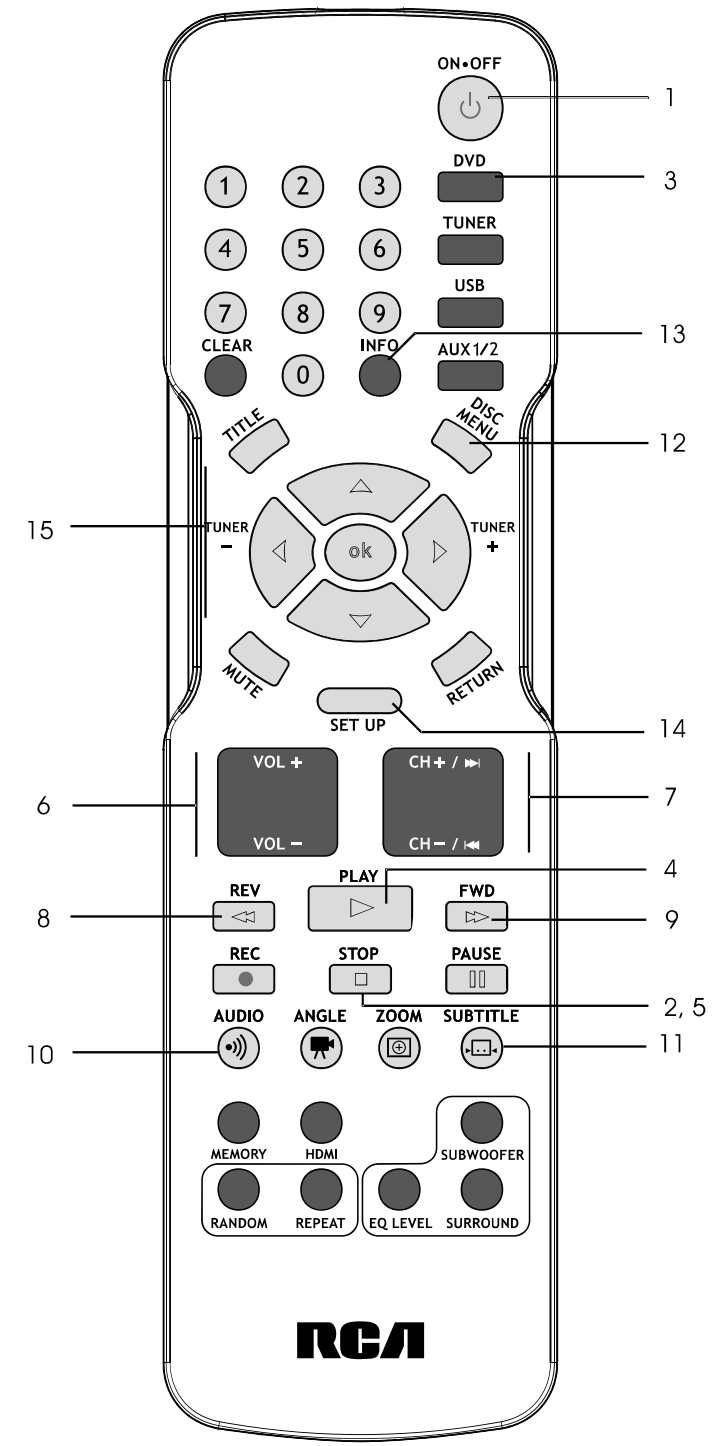

1.	Turn on/off the player	Press ON•OFF
2.	Open the disc tray	Press and hold STOP
3.	Select DVD mode and play DVD/CD	Press DVD
4.	Start playback of a DISC	Press PLAY
5.	Stop playback	Press STOP
6.	Adjust the volume	Press VOL +/-
7.	Skip to the next or previous chapter (DVD) or track (CD)	Press CH +/-
8.	Start reverse accelerated play	Press REV
9.	Start forward accelerated play	Press FWD
10.	Change the audio language during playback	Press AUDIO
11.	Change the subtitle language	Press SUBTITLE
12.	Access the Disc menu for DVD disc.	Press DISC MENU
13.	Access the Info menu	Press INFO
14.	Enter Setup menu.	Press SETUP
15.	Navigating through menus	Use the direction buttons to navigate through the menus. Press OK to confirm your selection.

Note:
See page 12 – 13 of User Manual for more details on remote control functions.

RCA

Quick Start Guide

RTD317
www.rcaaudiovideo.com

Congratulations on purchasing your new RCA unit.
Please read these instructions for quick tips on using the unit.

Setting up

1.Connecting the speakers

- Six speakers are provided with the unit:
  - 2 front speakers
  - 1 center speaker
  - 2 rear speakers
  - 1 subwoofer
- Speaker wires are color-coded to match the terminals.
- Connect the speaker wire to the corresponding color terminal as shown below.
- Press down the tab to open the terminal, insert the wire and release the tab.

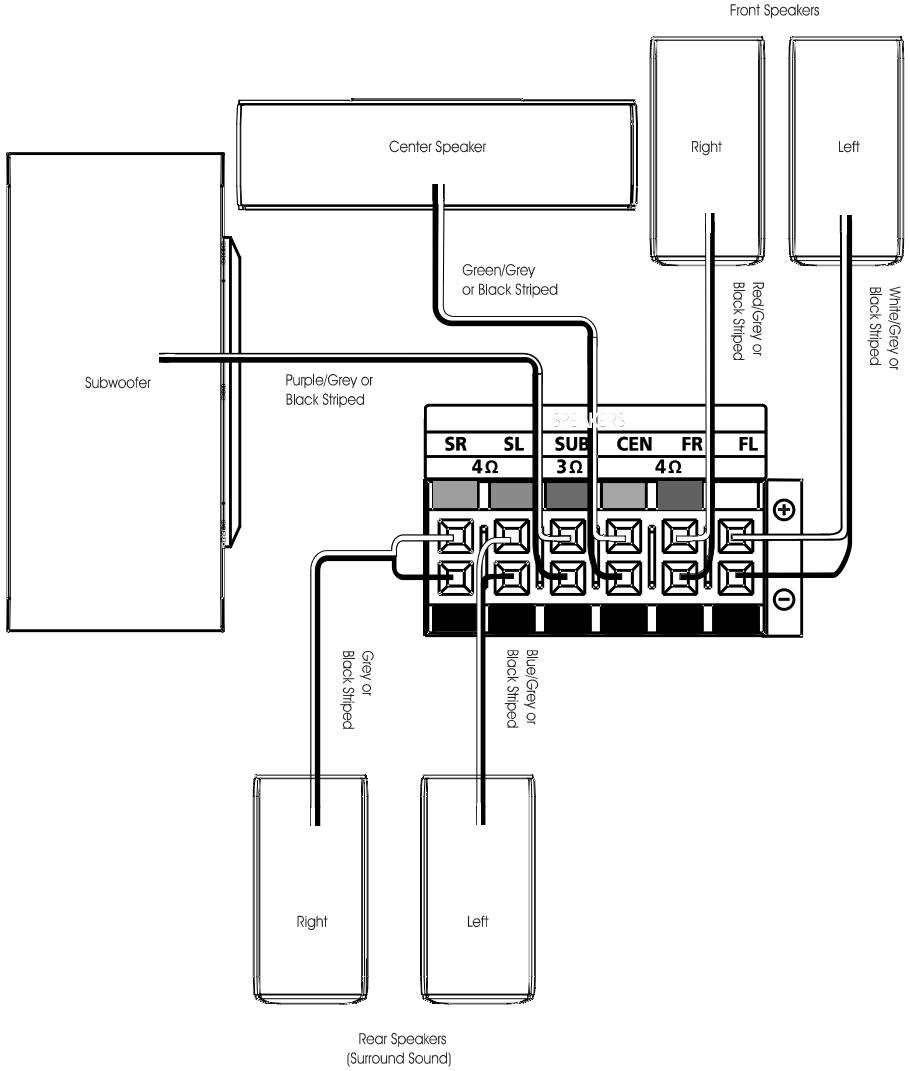

2.Positioning the speakers

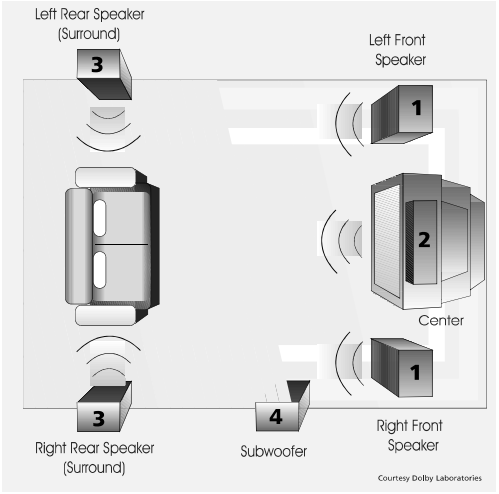

1. Center: In surround mode, the center speaker carries most of the dialog as well as music and effects. It should be set between the left and right speakers.
2. Front Speakers: Front speakers carry primarily music and sound effects.
3. Rear Speakers: The rear speakers' overall sound balance should be as close as possible to the front speakers. Proper placement is vital to establish an evenly distributed sound field.
4. Subwoofer: A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.) which dramatically heighten the action on the screen.

3.Connecting to Other Components

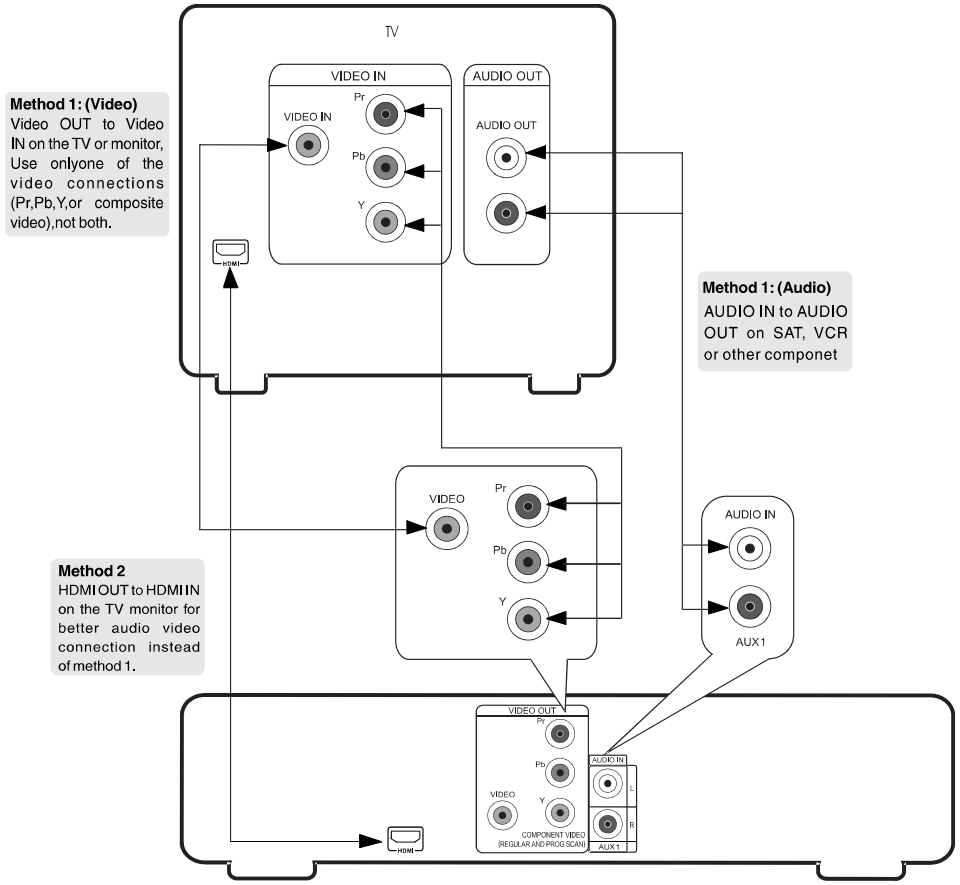
TV
VIDEO IN
AUDIO OUT
Pr
Pb
Y
HDMI
Method 1: (Video)
Video OUT to Video IN on the TV or monitor, Use onlyone of the video connections (Pr,Pb,Y,or composite video),not both.
Method 1: (Audio)
AUDIO IN to AUDIO OUT on SAT, VCR or other componet
VIDEO
AUDIO IN
AUX1
Method 2
HDMI OUT to HDMI IN on the TV monitor for better audio video connection instead of method 1.
COMPONENT VIDEO
(REGULAR AND PROG SCAN)

- The jacks on the back of the unit shown on the left are used to connect to other components.
- Connect the video OUT jacks to the IN jacks on your TV or monitor so the video content goes from the receiver to the screen.
- Connect the audio IN jacks to the OUT jacks on the component you wish to connect, so the sound from the component comes into the unit and out through the speakers.
- To connect to other components, you need the following video and audio cables:
  - Composite video cable (included)
  - Component video cable (not included)
  - Audio cables (color-coded in red and white) (not included)

  See page 6 of User Manual for details.

Note:

- This unit defaults to Progressive Scan (P-SCAN) off.
- See page 27 on the User Manual to learn how to turn P-SCAN on.
- If your TV or monitor does not support P-SCAN, you may get a picture with incorrect color or no color.

General controls

Front panel controls